

## USING "AUTO-PROGRAM" TO SEARCH FOR THE RIGHT CODE

If your Remote does not respond to the code(s) you tried or if you would rather not try using codes, you can try using the "auto-program" feature to program the TCC remote to your TV. The auto-program sequence will search ALL codes in its database to find a code that works with your TV.

Follow the directions below to use Auto-Program to program your TCC remote to your TV:

1. Turn on your TV.
2. On the remote control, press **TV** once; it will blink once.
3. Then press and hold **SETUP** until the **TV** key blinks twice.
4. Type **9 9 1** . The **TV** key will blink twice.
5. Aim the remote control at the TV and press **POWER** once.
5. Press and release the **CH+** key continuously, until the TV turns off.  
  
(NOTE: by pressing the CH+ key, you are trying every available code to find the right one so this could take awhile and might require you to press the CH+ key many times)
6. With the TV now OFF, press **POWER**. The TV should turn on.
7. Now press **SETUP** once to lock in the code. The LED will blink twice.  
  
(NOTE: If the TV does not turn on during step 6, then slowly press and release the **CH-** button to go back through the codes, then press **SETUP** when the TV turns on.

