



IPTV FEATURES

RESTART TV

Restart TV allows you to start a show from the beginning after it has already started! Restart TV only works on certain channels but that list is expanding. Just look at the on-screen programming guide for the “green clock icon” with an arrow to the left of the channel number.

To use Restart TV, **press Guide** on the remote and use the arrow buttons to navigate to a show in progress you would like to watch. If the channel uses Restart TV, the words “**Watch from Start**” will appear at the bottom of the screen. **Press the green button** on the remote and the show will start playing from the beginning. When it is playing, the pause, fast forward, and rewind features will work as usual.



NEWS FEEDS

Keep up with news (Packers, ESPN, CNN, FOX, etc.) and weather by adding News Feeds to your tv screen!

On your remote, **press Menu**, select **Settings**, select **Apps**, select **Info Center**. Go down the list of available news feeds and use your **left and right arrow buttons** to set each feed to a priority number or leave “off” if you do not want to see that feed. (if you set two feeds to the same number, the new setting will override the first setting). Arrow down to “**Save**” at the bottom when done and **press OK**. Press the **Blue button** to put them in order.



To view the feeds, press the **Yellow button** (to open the Apps menu), highlight **Info Center** and press **OK**. Press the right arrow to move to the next news feed(s). These news feeds don't have the entire article, just the headline and a short description.

CUSTOM RECEIVER NAMES

You can name the receivers in your home (family room, basement, kitchen, etc.) so when you use the Mobile App or Web Access to access your DVRs, you can tell which tv is which. Contact TCC for assistance with this feature.

Go to tccpro.net and click “News” and “TCC Videos” to watch a video on these features!

WHAT'S HOT

Check out what people in your area are watching!

Press the **Yellow** button on the remote. Arrow down to **What's Hot** and press **OK**. Press the **down arrow** to scroll through the list. Highlight and press **OK** on a show to watch it. If the show is already in progress and there is a green dot, press the **Green** button to start the show from the beginning (that is called Restart TV). Press **Exit** or **Live** when finished.



WEATHER

Get local weather including radar through your cable box.

Press the **Yellow** button on the remote. **Arrow down to Weather** and press **OK**. Weather will come on the screen. Press the **Green** button to get the **extended forecast** or press the **Yellow** button for the **radar**.

- **From the forecast**, press the **Red** button to get back to weather, the **Yellow** button for the radar or **Exit** to exit the Weather.
- **From the radar**, press the **Red** button to get back to Weather, the **Green** button to jump to the forecast or the **Blue** button to show the current radar. Once you get into Weather, just look at the color prompts on the screen for help.



GAMES

Your cable receiver has built-in games you can play using your remote control.

Press the **Yellow** button on the remote. Arrow down to **Games** and press **OK**. You will see the list of games with Minesweeper highlighted. Press **OK** to open Minesweeper or arrow down to another game and press **OK** to open it. Choose from Solitaire, Minesweeper, Spider Solitaire and Sudoku. Solitaire and Spider Solitaire use "picture in picture" so you can play during commercials and see when your show comes back on.



Look for **menu items** on the left and the **key for colored buttons** at the bottom to help you with the game. **Press Exit** to get out of the game and back to your program or to select a different game (you can't jump from one game to another, you must exit and go back in through the menu).

Go to tccpro.net and click "News" and "TCC Videos" to watch a video on these features!