



URC2060 Big Button TV Remote Guide

This is a guide to help you program the URC2060 Big Button remote control to your TV and help you learn how to find and use its basic features.

For more information and complete remote control instructions, visit:

https://www.urcsupport.com/urc_product/royal-urc2060b0/

In This Guide:

- 1) Programming instructions for top 10 TV brands
- 2) Programming instructions for all TV brands
- 3) Autoprogramming instructions to search all known codes
- 4) Basic instructions for the buttons and features on the remote
- 5) Codes for all brands of TVs

Programming Instructions for Top 10 Brands:



Turn on the TV and follow the steps below to set up your remote for the most popular brands.

Be sure to point the remote at your equipment during setup



1. Press and hold SETUP until the LED blinks twice

Programming Instructions for Top 10 Brands (continued)



2. Press the TV POWER key.



3. Find your TV brand in the charts below. Press and hold the corresponding digit key while aiming the remote at your TV.

Codes:	1	Insignia/Dynex	6	Samsung
	2	LG/Zenith	7	Sharp
	3	Mitsubishi	8	Sony
	4	Panasonic	9	Toshiba
	5	Philips/Magnavox	0	Vizio



4. Release the key when the TV turns off and setup is complete

Programming Instructions Using All Codes For Your TV:



Turn on your TV and follow the steps below to set up your remote.

Be sure to point the remote at your TV during setup



1. Press the TV POWER key.



2. Press and hold SETUP until the LED blinks twice



3. Using the digit keys on the remote, enter the first code shown in the code list at the end of this guide.



4. Test the remote to confirm that it controls your TV as expected. If it does not, try again using the next code listed.

“Autoprogram” Instructions To Search For Correct Code:



Turn on the TV and follow the steps below to search through all codes.

Be sure to point the remote at your TV during setup



1. Press and hold SETUP until the LED blinks twice



2. Press the TV POWER key.



3. Aim the remote at your TV and press and hold down the OK key.



4. Release the key when the TV turns off and setup is complete

Quick Guide to Buttons on the Remote

POWERSETUP KEYS

- * TV POWER turns your TV on and off
- * CBL POWER turns your cable box on and off
- * SETUP used for remote control programming

PLAYBACK CONTROLS

- * FF/PAUSE/PLAY/REW/STOP used to control playback of live, recorded, or On Demand programs
- * RECORD press to record selected program

NAVIGATION KEYS

- * GUIDE displays program guide
- * MENU displays main cable menu
- * INFO displays information on current selected program
- * EXIT closes current menu
- * FAV cycles through favorite channels set on your cable box
- * A-D KEYS used for special functions displayed on your cable menus
- * ON DEMAND used to access on demand program library

OTHER KEYS

- * LAST returns to the previously selected channel
- * INPUT cycles through video inputs on the TV or Audio Device
- * HELP displays the HELP menu screen for your cable box



A COMPLETE LIST OF TV CODES ARE ON THE NEXT/LAST PAGE. IF YOU HAVE ANY QUESTIONS OR PROBLEMS, PLEASE CONTACT TCC AT 715-695-2691.

Admiral 0093, 0463
 Advent 0761, 0817
 Aiko 0092
 Aikwa 1362
 Akai 0812, 1675, 0765, 0030, 0622, 1207, 1385, 1698, 1935, 2232
 Alifde 0180
 America Action 0180
 Anam 0030, 1089, 1365, 1589,
 AOC 1590, 2014, 2087
 Aomni 1623
 Apex Digital 0748, 0879, 0765, 0890,
 1217, 1991, 2397
 Astar 1531, 1738
 Audiotac 0180
 Audivox 1564, 0451, 0180, 0092,
 0802, 1284, 1769,
 1865, 1937, 1951, 2513
 Aventura 0171
 Axion 1937
 Barco 0556
 Baysonic 0180
 Bell & Howell 0154
 Bero 1032, 1315
 Blue Sky 0556, 2153
 Boleig 1696
 Bralton 0180
 Broksonic 0236, 0463, 1935, 1938
 Bysic 1309
 Candie 0030
 Carnivale 0030
 Carver 0054
 Celebrity 0765
 Celta 1362
 Champion 0451, 0092
 Chingong 0765
 Citizen 0060, 0030, 0092, 1669,
 1672, 1935
 Clanton 0180
 Cobly 1634, 2306, 2314, 2315,
 2338, 2340, 2344, 2345,
 2347, 2348, 2351, 2360

Commercial Solutions 0047
 Comtec 0180
 Continental 2357
 Coradir 2844
 Craig 0180
 Crosley 0000, 0054
 Crown 0180, 0672
 Crown Mustang 0672
 Curtis 1200, 1326, 2352, 2466
 Curtis Mathes 0047, 0054, 0154, 0451,
 0093, 0060, 0030, 0145,
 0166, 1661
 CXC 0180
 Gytron 1326
 Daewo 0154, 0451, 0092, 1661,
 0661, 0672
 Dell 1264, 1080
 Demon 0145
 Diamond Vision 1996, 1997
 Digital 1565
 Digital Lifestyles 1765
 Disney 1665
 Dumont 0017
 Durabrand 0463, 0180, 0178, 0171,
 1034, 1665
 Dynex 1785
 Electroband 0000

Electrograph 1755, 1623
 Electrohome 0463, 1670, 1672
 Elekta 0017, 1661
 Element 1687, 2183
 Emerson 1864, 0154, 0451, 0236,
 0463, 0180, 0178, 0171,
 1661, 1665, 1963, 1997
 Emprex 1422, 1765
 Emission 0030, 0813, 1365, 1589,
 2014, 2087
 Eposon 1122
 ESA 0812, 0171, 1963
 Fisher 0154, 1362
 Fluid 2964
 Fujitsu 0809, 0683, 0853
 Funai 0000, 0180, 0171, 1963
 Futuretech 0180
 Gateway 1755, 1756
 GE 0047, 0051, 0451, 0765, 0178
 GFM 1864, 0171, 1665, 1963
 Gibraltar 0017, 0030
 Go Video 0886, 1823
 GoldStar 0178, 0030
 Gradiente 0053, 0392
 Grundig 0672, 0683
 Grundy 0180
 Haier 1034, 1749, 2494
 Hallmark 0178
 Hansa 1783
 Hanss G 1348, 1745, 1783
 Hanspre 0054
 Harman/Kardon 0180
 Harvard 0180
 Haverm 0093
 Helios 0865
 Hello Kitty 0451
 Hewlett Packard 1494, 1088, 1089
 Himitsu 0180
 Hisense 0748, 1314, 1660, 2098, 2355
 Hitachi 1517, 0797, 1345, 2215, 2433
 HP 1494, 1088, 1089
 Hyundai 0849, 1219, 1294
 I-finc 1746
 Ilo 1286, 1603, 1665, 1684, 1990
 Infinity 0054
 Infrity 1603, 1990
 Initial 1564, 0463, 0171, 1326, 1385,
 1517, 1660, 1785, 1963, 2417
 Insignia 0017
 Inteq 0451, 1661
 IR 0877
 JBL 0054
 JCB 0000
 JCM 2256
 Jensen 0761, 0817, 1299, 1326
 JVC 0463, 0053, 0731
 KDS 1687
 KEC 0180
 Ken Brown 1321
 Kenwood 0030
 Keroto 0054, 0706, 0556
 KHL 0765, 1962
 Konika 1385
 Kost 1262
 KTV 0180, 0030
 LG 0017, 0178, 0030, 0856
 LiteOn 1088
 LXI 0047, 0054, 0154, 0156, 0178
 M&S 0054, 0236
 MAG 1687

Magnavox 1755, 0054, 0051, 0030, 0171,
 0706, 0802, 1198, 1365, 1525,
 1867, 1963, 1990
 Marantz 0054, 0030, 1398
 Matsushita 0250
 Maxent 1755, 1211, 1757
 Megatron 0178, 0145
 Memorex 0154, 0463, 0150, 0178, 0877,
 1665, 1670, 1785, 1938
 MGA 0150, 0178, 0030
 Midland 0047, 0017, 0051
 Minrex 1603, 1990
 Mitsubishi 1250, 0093, 0150, 0178
 Motorola 0093
 MTC 0060, 0030
 Multitech 0156, 0178
 NAD 2104
 Naxa 0030, 1398
 NEC 1755
 NetV 1755
 Nexus Electronics 2183
 Nikko 0178, 0030, 0092
 Nimbro 2104
 Noblex 0154, 0430
 Norcent 0748, 0824, 1089, 1365, 1589,
 1590, 1745
 Norwood Micro 1286
 NTC 0092
 NUVision 1657
 Olivia 1610, 1144, 1240
 Onwa 0180
 Optimus 0250, 0154, 0166
 Optima 1348
 Optonica 0093
 Orion 0736, 0463, 1938
 Panasonic 0250, 0051
 PAK 2104
 Penney 0047, 0156, 0051, 0060, 0178, 0030
 Peters 1523
 Philips 0054, 0463, 0030, 01745, 0171,
 1661, 1665, 1963
 Pilot 0054, 0171, 0556, 1867, 1961
 Pioneer 0166, 1398
 Planar 1589
 Polaroid 1523, 0765, 2120, 2117, 2063,
 1991, 1962, 1769, 1767, 1762,
 1687, 1565, 1385, 1327, 1326,
 1316, 1314, 1286, 1276, 1262, 0865
 Portland 0451, 0092, 1661
 Prima 0761, 0817, 1749, 1785
 Prism 0051
 Proscan 0047, 0030, 2147, 2183, 2256
 Proton 0178
 Proview 1687
 Pulsar 0017
 Puntikal 2687
 Pyle 1200
 Quasar 0250, 0051
 Quasar 0047, 0154, 0180, 0178, 0030
 RadioShack 0047, 0051, 0093, 0060, 1661,
 1958, 2403, 2434, 2746
 Realistic 0154, 0180, 0178, 0030
 Reco 0706
 RevolutionHD 1623
 Rumco 0017, 0030, 1398
 Samsung 1755, 0030
 Samsung 0812, 0060, 0178, 0030, 0587, 0766
 Samsui 0451
 Sanvoo 0463, 0171, 1670, 1935, 1938
 Sanyo 0054, 0154, 1362
 Sceptre 0878, 1217, 1360, 1599, 2337

Scotch 0178
 Scott 0236, 0180, 0178, 1711
 Sears 0047, 0054, 0154, 0156,
 0178, 0171
 Sentivox 0180
 Sense 0156, 1743
 Semp 1865
 Sheng 0093
 Sheng Chia 0093
 Sherwood 1399
 Signature 0054
 Signet 1262
 Skyworth 1799
 Sole 1623
 Sony 0000, 1685
 Soundesign 0180, 0178
 Soyo 1746, 1826
 Space Tek 1696
 Spectronic 1687
 Squareview 0171
 SSS 0180
 Starlike 0180
 Sunbrite 2337
 Superscan 0093, 0864
 Supreme 0000
 SVA 0748, 0587, 0865, 1963
 Sylvania 1864, 0054, 0030, 0171,
 0587, 1314, 1665, 1963
 Symphonic 0180, 0171
 Syntex 1610, 1144, 1240
 Tandy 0093
 Taram 1286, 1287, 1361, 1756
 TCL 2403, 2434
 Technics 0250, 0051
 Techniview 0847, 2004
 Teknika 0051
 TMI 0054, 0180, 0150, 0060, 0092
 TNCI 0017
 Toshiba 0154, 0156, 0093, 0060,
 0845, 1343, 1743, 1935
 TruTech 1665, 1723, 2066
 TVS 0463
 US Logic 1286
 Vector Research 0030
 Venture 1865
 Victor 0053
 Vidikon 0054, 1398
 Vidtek 0178
 Viewsonic 1755, 1564, 0797, 0857,
 0864, 0885, 1330, 1365, 1578,
 1627, 1742, 2014, 2087
 Vior 1207, 1684, 2104, 2352
 Vistron 2142
 Vizio 1758, 0854, 0885, 1756
 Wards 0000, 0047, 0054, 0017,
 0154, 0156, 0051, 0180, 0060,
 0178, 0030
 Waycan 0156
 Westinghouse 1712, 0451, 0885, 0890,
 1217, 1282, 2499
 Write Westinghouse 0463, 1661
 Wyse 1365
 Yaritha 0030, 0797
 Zenith 0000, 0047, 0017, 0463,
 0178, 0030, 0145,
 0092, 1661, 1365