



## URC2060 Big Button TV Remote Guide

This is a guide to help you program the URC2060 Big Button remote control to your TV and help you learn how to find and use its basic features. For more information and complete remote control instructions, visit: [https://www.urcsupport.com/urc\\_product/royal-urc2060b0/](https://www.urcsupport.com/urc_product/royal-urc2060b0/)

### In This Guide:

- 1) Programming instructions for top 10 TV brands
- 2) Programming instructions for all TV brands
- 3) Autoprogramming instructions to search all known codes
- 4) Basic instructions for the buttons and features on the remote
- 5) Codes for all brands of TVs

## Programming Instructions for Top 10 Brands:



**Turn on the TV and follow the steps below to set up your remote for the most popular brands.**

Be sure to point the remote at your equipment during setup



**1. Press and hold SETUP until the LED blinks twice**

## Programming Instructions for Top 10 Brands (continued)



**2. Press the TV POWER key.**



**3. Find your TV brand in the charts below. Press and hold the corresponding digit key while aiming the remote at your TV.**

<b>Codes:</b>	<b>1 Insignia/Dynex</b>	<b>6 Samsung</b>
	<b>2 LG/Zenith</b>	<b>7 Sharp</b>
	<b>3 Mitsubishi</b>	<b>8 Sony</b>
	<b>4 Panasonic</b>	<b>9 Toshiba</b>
	<b>5 Philips/Magnavox</b>	<b>0 Vizio</b>



**4. Release the key when the TV turns off and setup is complete**

## Programming Instructions Using All Codes For Your TV:



**Turn on your TV and follow the steps below to set up your remote.**

Be sure to point the remote at your TV during setup



**1. Press the TV POWER key.**



**2. Press and hold SETUP until the LED blinks twice**



**3. Using the digit keys on the remote, enter the first code shown in the code list at the end of this guide.**



**4. Test the remote to confirm that it controls your TV as expected. If it does not, try again using the next code listed.**

## **“Autoprogram” Instructions To Search For Correct Code:**



**Turn on the TV and follow the steps below to search through all codes.**

Be sure to point the remote at your TV during setup



**1. Press and hold SETUP until the LED blinks twice**



**2. Press the TV POWER key.**



**3. Aim the remote at your TV and press and hold down the OK key.**



**4. Release the key when the TV turns off and setup is complete**

# Quick Guide to Buttons on the Remote

## POWER SETUP KEYS

- \* TV POWER turns your TV on and off
- \* CBL POWER turns your cable box on and off
- \* SETUP used for remote control programming

## PLAYBACK CONTROLS

- \* FF/PAUSE/PLAY/REW/STOP used to control playback of live, recorded, or On Demand programs
- \* RECORD press to record selected program

## NAVIGATION KEYS

- \* GUIDE displays program guide
- \* MENU displays main cable menu
- \* INFO displays information on current selected program
- \* EXIT closes current menu
- \* FAV cycles through favorite channels set on your cable box
- \* A-D KEYS used for special functions displayed on your cable menus
- \* ON DEMAND used to access on demand program library

## OTHER KEYS

- \* LAST returns to the previously selected channel
- \* INPUT cycles through video inputs on the TV or Audio Device
- \* HELP displays the HELP menu screen for your cable box



A COMPLETE LIST OF TV CODES ARE ON THE NEXT/LAST PAGE. IF YOU HAVE ANY QUESTIONS OR PROBLEMS, PLEASE CONTACT TCC AT 715-695-2691.

Admiral 0093, 0463  
 Advent 0761, 0817  
 Alko 0092  
 Alko 0017, 1661  
 Alwa 1362  
 Akai 0812, 1675, 0765, 0030, 0622, 1207, 1385, 1688, 1935, 2232  
 Alifide 0180  
 America Action 0180  
 Anam 0030, 1089, 1365, 1589  
 AOC 1590, 2014, 2087  
 Aomni 1623  
 Apex Digital 0748, 0879, 0765, 0890, 1217, 1991, 2397  
 Astar 1531, 1738  
 Audiotac 0180  
 Audivox 1564, 0451, 0180, 0092, 0802, 1284, 1769, 1865, 1937, 1951, 2513  
 Aventura 0171  
 Axion 1937  
 Barco 0556  
 Baysonic 0180  
 Bell & Howell 0154  
 Bend 1032, 1315  
 Blue Sky 0556, 2153  
 Boleig 1696  
 Bralton 0180  
 Brookson 0236, 0463, 1935, 1938  
 Bysonic 1309  
 Candie 0030  
 Carnivale 0030  
 Carver 0054  
 Celebrity 0765  
 Celia 1362  
 Champion 0451, 0092  
 Chingong 0765  
 Cinerel 0060, 0030, 0092, 1669, 1672, 1935  
 Clanton 0180  
 Cobly 1634, 2306, 2314, 2315, 2338, 2340, 2344, 2345, 2347, 2348, 2351, 2360

Commercial Solutions 0047  
 Comtec 0180  
 Continental 2357  
 Coradir 2844  
 Craig 0180  
 Crosley 0000, 0054  
 Crown 0180, 0672  
 Crown Mustang 0672  
 Curtis 1200, 1326, 2352, 2466  
 Curtis Mathes 0047, 0054, 0154, 0451, 0093, 0060, 0030, 0145, 0166, 1661  
 CXC 0180  
 Gytron 1326  
 Daewo 0154, 0451, 0092, 1661, 0661, 0672  
 Dell 1264, 1080  
 Demon 0145  
 Diamond Vision 1996, 1997  
 Digital 1565  
 Digital Lifestyles 1765  
 Disney 1665  
 Dumont 0017  
 Durabrand 0463, 0180, 0178, 0171, 1034, 1665  
 Dynex 1785  
 Electroband 0000

Electrograph 1755, 1623  
 Electrohome 0463, 1670, 1672  
 Elekta 0017, 1661  
 Element 1687, 2183  
 Emerson 1864, 0154, 0451, 0236, 0463, 0180, 0178, 0171, 1661, 1665, 1963, 1997  
 Emprex 1422, 1765  
 Emission 0030, 0813, 1365, 1589, 2014, 2087  
 Epsom 1122  
 ESA 0812, 0171, 1963  
 Fisher 0154, 1362  
 Fluid 2964  
 Fujitsu 0809, 0683, 0853  
 Funai 0000, 0180, 0171, 1963  
 Futuretech 0180  
 Gateway 1755, 1756  
 GE 0047, 0051, 0451, 0765, 0178  
 GFM 1864, 0171, 1665, 1963  
 Gibraltar 0017, 0030  
 Go Video 0886, 1823  
 GoldStar 0178, 0030  
 Gradiente 0053, 0392  
 Grundig 0672, 0683  
 Grundy 0180  
 Haier 1034, 1749, 2494  
 Hallmark 0178  
 Hansa 1783  
 Hansa G 1348, 1745, 1783  
 Hanspree 0054  
 Harman/Kardon 0180  
 Harvard 0180  
 Havermv 0093  
 Helios 0865  
 Hello Kitty 0451  
 Hewlett Packard 1494, 1088, 1089  
 Himitsu 0180  
 Hisense 0748, 1314, 1660, 2098, 2355  
 Hitachi 0145, 0797, 1345, 2215, 2433  
 HP 1494, 1088, 1089  
 Hyundai 0849, 1219, 1294  
 I-finc 1746  
 Ilo 1286, 1603, 1665, 1684, 1990  
 Infinity 1603, 1990  
 Inital 1564, 0463, 0171, 1326, 1385, 1517, 1660, 1785, 1963, 2417  
 Insignia 0054  
 Inteq 0017  
 RT 0451, 1661  
 IX 0877  
 JBL 0054  
 JCB 0000  
 JCM 2256  
 Jensen 0761, 0817, 1299, 1326  
 JVC 0463, 0053, 0731  
 KDS 1687  
 KEC 0180  
 Ken Brown 1321  
 Kenwood 0030  
 Kenwood 0054, 0706, 0556  
 Kih 0765, 1962  
 Konika 1385  
 Kost 1262  
 KTV 0180, 0030  
 LG 0017, 0178, 0030, 0856  
 LiteOn 1088  
 LXI 0047, 0054, 0154, 0156, 0178  
 M&S 0054, 0236  
 MAG 1687

Magnavox 1755, 0054, 0051, 0030, 0171, 0706, 0802, 1198, 1365, 1525, 1867, 1963, 1990  
 Marantz 0054, 0030, 1398  
 Matsushita 0250  
 Maxent 1755, 1211, 1757  
 Megatron 0178, 0145  
 Memorex 0154, 0463, 0150, 0178, 0877, 1665, 1670, 1785, 1938  
 MGA 0150, 0178, 0030  
 Midland 0047, 0017, 0051  
 Minrex 1603, 1990  
 Mitsubishi 1250, 0093, 0150, 0178  
 Motorola 0093  
 MTC 0060, 0030  
 Multitech 0156, 0178  
 NAD 2104  
 Naxa 2104  
 NEC 0030, 1398  
 NetV 1755  
 Nexus Electronics 2183  
 Nikko 0178, 0030, 0092  
 Nimbro 2104  
 Noblex 0154, 0430  
 Norcent 0748, 0824, 1089, 1365, 1589, 1590, 1745  
 Norwood Micro 1286  
 NTC 0092  
 NUVision 1657  
 Olivia 1610, 1144, 1240  
 Onwa 0180  
 Optimus 0250, 0154, 0166  
 Optima 1348  
 Optonica 0093  
 Orion 0736, 0463, 1938  
 Panasonic 0250, 0051  
 PAK 2104  
 Penney 0047, 0156, 0051, 0060, 0178, 0030  
 Peters 1523  
 Philips 0054, 0463, 0030, 01745, 0171, 1661, 1665, 1963  
 Pilot 0054, 0171, 0556, 1867, 1961  
 Pioneer 0166, 1398  
 Planar 1589  
 Polaroid 1523, 0765, 2120, 2117, 2063, 1991, 1962, 1769, 1767, 1762, 1687, 1565, 1385, 1327, 1326, 1316, 1314, 1286, 1276, 1262, 0865  
 Portland 0451, 0092, 1661  
 Prima 0761, 0817, 1749, 1785  
 Prism 0051  
 Proscan 0047, 0030, 2147, 2183, 2256  
 Proton 0178  
 Proview 1687  
 Pulsar 0017  
 Puntikal 2687  
 Pyle 1200  
 Quasar 0250, 0051  
 Quasar 0047, 0154, 0180, 0178, 0030  
 RadioShack 0047, 0051, 0093, 0060, 1661, 1958, 2403, 2434, 2746  
 Realistic 0154, 0180, 0178, 0030  
 Reco 0706  
 RevolutionHD 1623  
 Rumco 0017, 0030, 1398  
 Sampo 1755, 0030  
 Samsung 0812, 0060, 0178, 0030, 0587, 0766  
 Sansui 0451  
 Sanwo 0463, 0171, 1670, 1935, 1938  
 Sanyo 0054, 0154, 1362  
 Sceptre 0878, 1217, 1360, 1599, 2337

Scotch 0178  
 Scott 0236, 0180, 0178, 1711  
 Sears 0047, 0054, 0154, 0156, 0178, 0171  
 Sentivox 0180  
 Semp 0156, 1743  
 Sense 1865  
 Sheng 0093  
 Sheng Chia 0093  
 Sherwood 1399  
 Signature 0054  
 Signet 1262  
 Skyworth 1799  
 Sole 1623  
 Sony 0000, 1685  
 Soundesign 0180, 0178  
 Soyo 1746, 1826  
 Space Tek 1696  
 Spectronic 1687  
 Squareview 0171  
 SSS 0180  
 Starlike 0180  
 Sunbrite 2337  
 Superscan 0093, 0864  
 Supreme 0000  
 SVA 0748, 0587, 0865, 1963  
 Sylvania 1864, 0054, 0030, 0171, 0587, 1314, 1665, 1963  
 Symphonic 0180, 0171  
 Syntex 1610, 1144, 1240  
 Tandy 0093  
 Taramu 1286, 1287, 1361, 1756  
 TCL 2403, 2434  
 Technics 0250, 0051  
 Techniview 0847, 2004  
 Teknika 0051  
 Teknika 0054, 0180, 0150, 0060, 0092  
 TNCI 0017  
 Toshiba 0154, 0156, 0093, 0060, 0845, 1343, 1743, 1935  
 Tophouse 1665, 1723, 2066  
 TruTech 0463  
 TVS 1286  
 US Logic 1865  
 Vector Research 0030  
 Venture 1665  
 Victor 0054  
 Wildkon 0054, 1398  
 Wildkon 0178  
 Viewsonic 1755, 1564, 0797, 0857, 0864, 0885, 1330, 1365, 1578, 1627, 1742, 2014, 2087  
 Vior 1207, 1684, 2104, 2352  
 Vistron 2142  
 Vizio 1758, 0854, 0885, 1756  
 Vizio 0000, 0047, 0054, 0017  
 Wards 0154, 0156, 0051, 0180, 0060, 0178, 0030  
 Waycan 0156  
 Westinghouse 1712, 0451, 0885, 0890, 1217, 1282, 2499  
 Write Westinghouse 0463, 1661  
 Wyse 1365  
 Zenith 0030, 0797  
 Zenith 0000, 0047, 0017, 0463, 0178, 0030, 0145, 0092, 1661, 1365